

INSTALLATION GUIDE

HVS-6000ME

M/E / DSK Expansion card

HVS-6000MV

Multiview Output Expansion Card

HVS-6000SDI-EX

12G-SDI Input Expansion Card
(for I/O slots)

HVS-6000SDO

12G-SDI Output Expansion Card

1st Edition

Upon Receipt

HVS-6000 optional cards are fully inspected and adjusted prior to shipment. Check your received items against the packing lists below. Check to ensure no damage has occurred during shipment. If damage has occurred, or items are missing, inform your supplier immediately.

◆ **HVS-6000 Option Card Box**

ITEM	QTY	REMARKS
HVS-6000ME, HVS-6000MV, HVS-6000SDI-EX or HVS-6000SDO	1	
LAN cable	1	
Operation Manual	1	This manual

◆ **Required tool**

Flathead screwdriver

1. Card Installation Slots

◆ HVS-6000ME

HVS-6000ME is an M/E/DSK expansion card for HVS-6000. Two cards are installed as standard. In addition, up to two cards can be added as an option. M/E expansion is provided when installed in the M/E 3 slot and DSK expansion is provided when installed in the OPTION slot.

◆ HVS-6000MV

HVS-6000MV is a Multiview video output expansion card for HVS-6000. One card can be installed as an option.

By installing the HVS-6000MV, four channels (MV1-MV4) of multi-view video output can be added, allowing you to monitor input video and composited output video.


◆ HVS-6000SDI-EX

HVS-6000SDI-EX is a 12G-SDI input expansion card (installed to I/O slot) for HVS-6000. Up to two cards can be installed as an option.


◆ HVS-6000SDO

HVS-6000SDO is a 12G-SDI output expansion card for HVS-6000. Two cards are installed as standard. In addition, up to two cards can be added as an option.

HVS-6000 Front panel

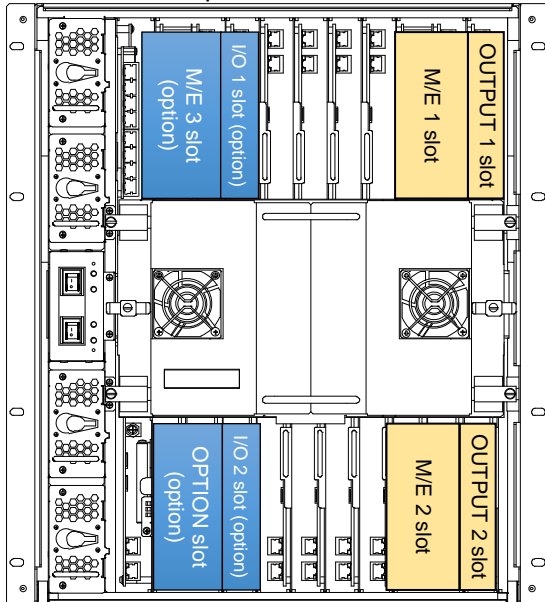

HVS-6000 Rear panel

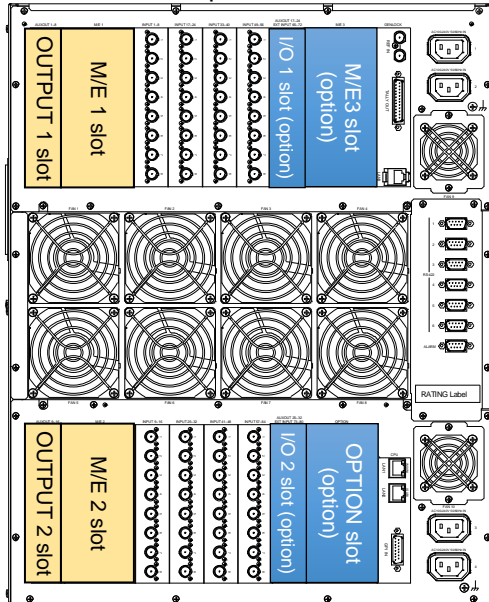

Upper Slots

Slot	Slot label	Installable cards
OUTPUT 1 (Standard)	AUXOUT 1-8	HVS-6000SDO
M/E 1 (Standard)	M/E 1	HVS-6000ME
I/O 1 (Option)	AUXOUT 17-24 EXT INPUT 65-72	HVS-6000SDI-EX or HVS-6000SDO
M/E 3 (Option)	M/E 3	HVS-6000ME

Lower Slots

Slot	Slot label	Installable cards
OUTPUT 2 (Standard)	AUXOUT 9-16	HVS-6000SDO
M/E 2 (Standard)	M/E 2	HVS-6000ME
I/O 2 (Option)	AUXOUT 25-32 EXT INPUT 73-80	HVS-6000SDI-EX or HVS-6000SDO
OPTION (Option)	OPTION	HVS-6000ME or HVS-6000MV

2. Procedure for Initial Installation / Replacement


Follow the steps below to prepare installation or replacement.
For the slot position, see Sec. 1. "Card Installation Slot".

The following procedure shows how to install an HVS-6000SDO into the I/O 1 slot.


- (1) Turn OFF the power switches on the front of the HVS-6000.
- (2) Verify that the POWER indicator is lit orange, and then disconnect the power cord from the rear panel.

When replacing cards, disconnect all connected BNC cables.


- (3) Completely loosen the four fixing screws on both sides of the front panel, and then remove the front panel.

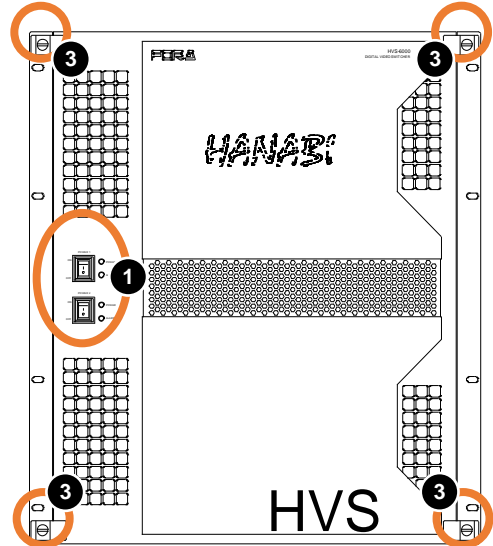

- (4) Disconnect all LAN cables from LAN ports on the all cards.
- (5) Turn the knob of the **LAN cable fixing bracket** upright to release the LAN cable bundle.

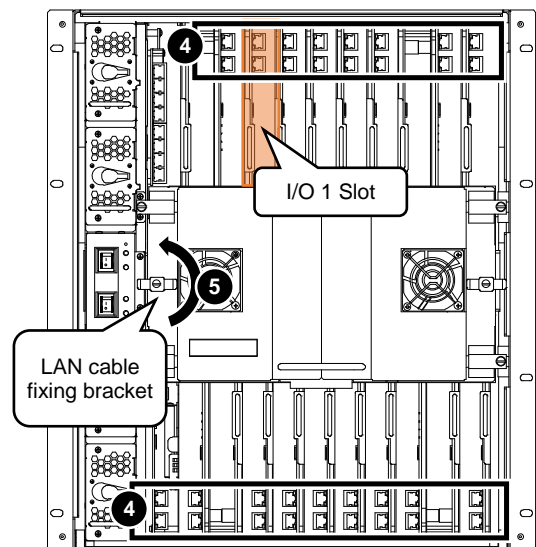

- (6) Loosen the four fixing screws at the four corners of the front card unit, and pull the front card unit straight out toward you.
Do not remove the screws completely at once, but keep them slightly engaged and pull them out little by little so that the front card unit does not pop out all the way to the front.

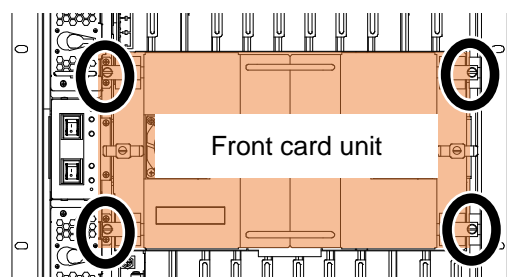


IMPORTANT

Be careful when working on the front card unit, as the connectors are easily damaged while removing the card unit.


(7) Completely release the **fixing screw** on the blank panel or the installed HVS-6000SDO and pull out the blank panel or the card.

(8) Insert the HVS-6000SDO so that it fits into the upper and lower rails of the I/O 1 slot. Push it in all the way.


* Confirm the card direction before insertion.

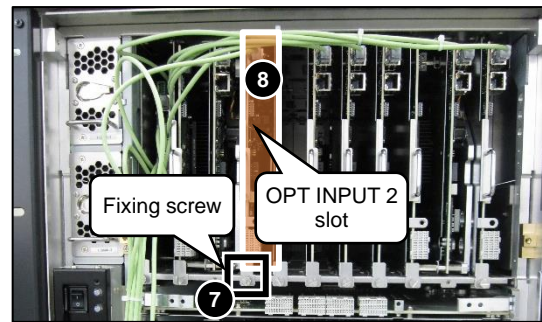

Upper slot

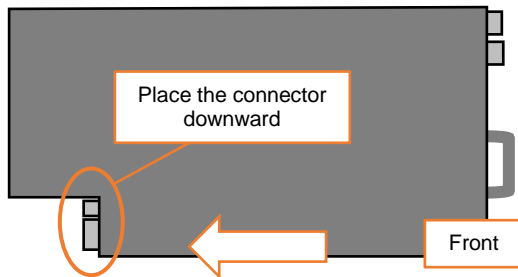

Lower slot

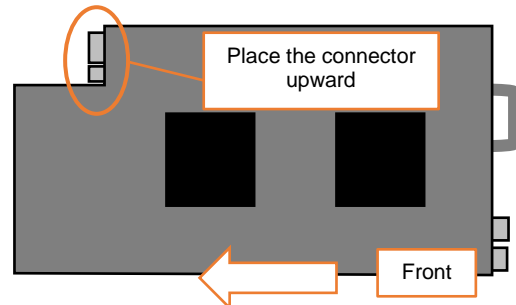


(9) Fasten the **fixing screw** of the new HVS-6000SDO installed in Step (8).

(10) Connect one end of the supplied LAN cable to an available port on the hub.

(11) Re-install the front card unit removed in (6).

(12) Re-connect the LAN cables disconnected in (4). Each card has two LAN ports. Plug LAN cables to the following ports.

- MU_CPU card (Bottom-left): Top and bottom LAN ports
- Card on the upper slot: Top LAN ports
- Card on the lower slot: Bottom LAN ports

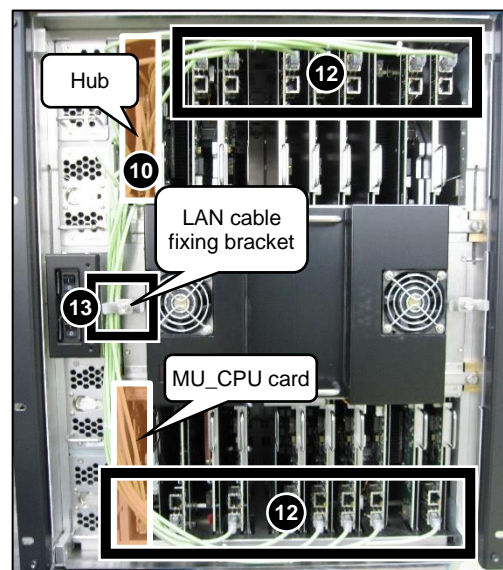

(13) Gather the LAN cables behind the **LAN cable fixing bracket**. Turn the **LAN cable fixing bracket** sideways and secure the LAN cables.

(14) Re-install the front panel.

(15) Re-plug power cords on the back of the HVS-6000 and turn on power switches on the front.

(16) Open the [SETUP > STATUS > VERSION > MU IN/OUT] menu in the OU and check card versions. (See Sec. 2-1. "Version Check.")

A card installation is now complete.

2-1. Version Check

◆ **HVS-6000SDI-EX / HVS-6000SDO**

Open the [SETUP > STATUS > VERSION > MU IN/OUT] menu in the OU and refer to the table below to check whether the card version is displayed (the card is properly recognized) under card installed slots.

Card slot	Card
OUTPUT 1 (Standard)	AUXOUT 1
OUTPUT 2 (Standard)	AUXOUT 2
I/O 1 (Option)	IN/OUT 1
I/O 2 (Option)	IN/OUT 2

◆ **HVS-6000ME / HVS-6000MV**

Open the [SETUP > STATUS > VERSION > MU M/E] menu refer to the table below to check whether the card version is displayed (the card is properly recognized) on card installed slots.

Card slot	Card
M/E 1 (Standard)	M/E 1
M/E 2 (Standard)	M/E 2
M/E 3 (Option)	M/E 3
OPTION (Option)	OPT



FOR-A COMPANY LIMITED

Head Office 3-8-1 Ebisu, Shibuya-ku, Tokyo 150-0013, Japan
Overseas Division Tel: +81(0)3-3446-3936 Fax: +81(0)3-3445-5116
Japan Branch Offices Osaka/Okinawa/Fukuoka/Hiroshima/Nagoya/Sendai/Sapporo
R&D/Production Sakura Center/Sapporo Center

FOR-A Corporation of America Corporate Office/Service Center

11155 Knott Ave., Suite G, H & I, Cypress, CA 90630, U.S.A.
Tel: +1 714-894-3311 Fax: +1 714-894-5399

FOR-A Corporation of America Northeast Office

1360 Clifton Ave., Clifton, NJ 07012, U.S.A.
Tel: +1 973-220-8471 Fax: +1 714-894-5399

FOR-A Corporation of America Southeast Office

Tel: +1-305-773-7608

FOR-A Corporation of America Support Center

2400 N.E. Waldo Road, Gainesville, FL 32609, U.S.A.
Tel: +1 352-371-1505 Fax: +1 714-894-5399

FOR-A Latin America and the Caribbean Miami Office

Tel: +1 657-600-5759

FOR-A Latin America and the Caribbean Sao Paulo Office

Tel: +55 (0)11-99913-3751

FOR-A Europe S.r.l.

Via Volturmo, 37, 20861, Brugherio MB, Italy
Tel: +39 (0)39-916-4811

FOR A UK Limited

Trident Court, 1 Oakcroft Road Chessington, KT9 1BD, U.K.
Tel: +44 (0)20-3044-2935 Fax: +44 (0)20-3044-2936

FOR-A Italia S.r.l.

Via Volturmo, 37, 20861, Brugherio MB, Italy
Tel: +39 (0)39-881-086

FOR-A Corporation of Korea

1007, 57-5, Yangsan-ro, Yeongdeungpo-gu, Seoul 07271, Korea
Tel: +82 (0)2-2637-0761 Fax: +82 (0)2-2637-0760

FOR-A China Limited

1618 Huateng Building, No. 302, 3 District, Jinsong, Chaoyang, Beijing 100021, China
Tel: +86 (0)10-8721-6023 Fax: +86 (0)10-8721-6033

FOR-A Middle East Africa Office

Aurora Tower, Office 1407, Dubai Media City, P.O. Box 502688, Dubai, UAE
Tel: +971 (0)4 551 5830 Fax: +971 (0)4 551 5832

FOR-A India Private Limited. Mumbai Office

2nd Floor, Valecha Chambers, Link Road, Andheri (W), Mumbai 400053, India
Tel: +91-(0)22-2673-3623 Fax: +91-(0)22-2639-3415

FOR-A India Private Limited. Delhi Office

8th floor, World Trade Tower, Sector-16, Noida, Uttar Pradesh 201301, India
Tel: +91-(0)12-0423-8674

FOR-A South East Asia Office

Studio 09, Rm. A1, 3/F., Phase 1, Hang Fung Ind. Bldg., 2G Hok Yuen St., Hung Hom, Hong Kong
Tel: +852 2110-1352

You can download manuals and other documents by registering your email address.
<http://www.for-a.com/>

