

USF-212BS


Quick Setup Guide



Packing list
 USF-212BS: 1
 AC Cord: 1 set USB flash drive: 1
 Quick Setup Guide: 1 (This guide)

1. AC Cord Clamp Installation


- 1) Insert the anchor into the hole next to the AC inlet.
- 2) Plug in the AC cord.
- 3) Adjust the strap length to fit.
- 4) Wrap the AC cord clamp around the AC cord.
- 5) Gently pull on the AC cord to ensure it has been securely plugged in.

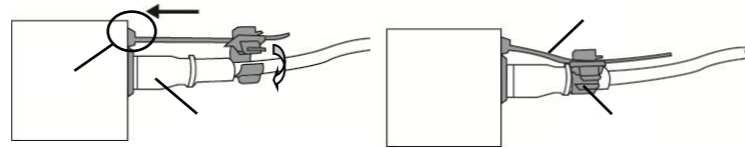


2. Opening / Closing the Front Panel

Opening the Front Panel

The front panel may be difficult to open or close if the USF frame is placed on a desk, and may be damaged if it is forced to open. Perform the following steps after setting the frame in a rack.




- 1 Loosen the two thumbscrews on the front panel by turning them counterclockwise.

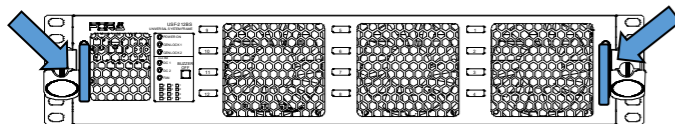


- 2 Pull out the front panel using the pull handles. The fan stops while the front panel is open.

When the front panel is being opened, one short beep sounds every 30 seconds to notify the user and after 5 minutes (default setting), the short beep changes to normal alarm buzzer. When performing installation or other modification while the power is on, complete the procedure in a short period of time.


- 3 Pull out the front panel.

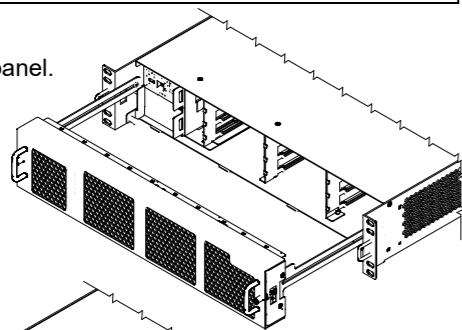


- 4 The front panel rails can be tilted down.

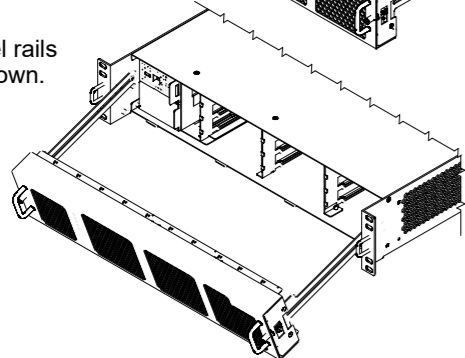


Closing the Front Panel

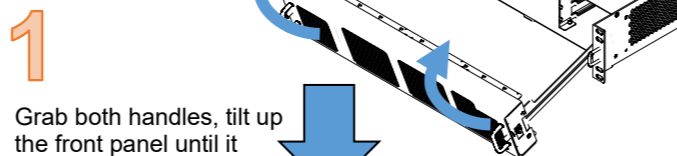

- 1 Grab both handles, tilt up the front panel until it is aligned and push the front panel back into the frame body.

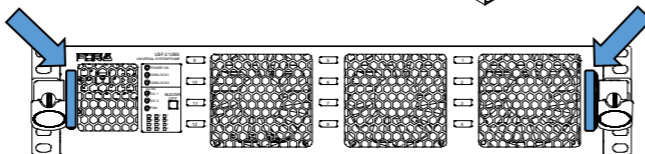

- 2 If the frame is powered on, the POWER LED lights green and fans begin to work once the front panel is properly installed. If the LED does not light up, grab both handles and push the panel until it is tightly fitted into place.




- 3 Tighten two screws in both sides to secure the front panel.

Twenty seconds after the front panel is installed, all LEDs on the front panel light up. If not, the front panel has not been installed properly. Re-install the front panel.


3. Detaching / Attaching the Front Panel

Detaching the Front Panel

- 1 Fully draw out the front panel.

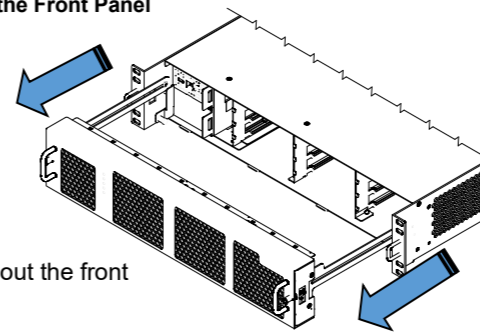


- 2 The front panel can be detached by gently pushing both rails inward.

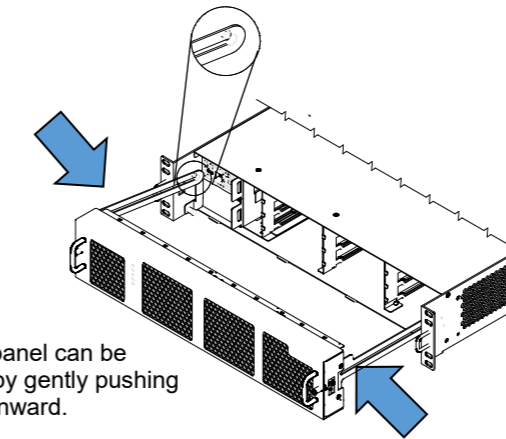


Attaching the Front Panel

- 1 Gently push rails on both sides inward to respectively fit the tab into the aperture of the guide rail. Handle the front panel carefully so as not to bend the rails.

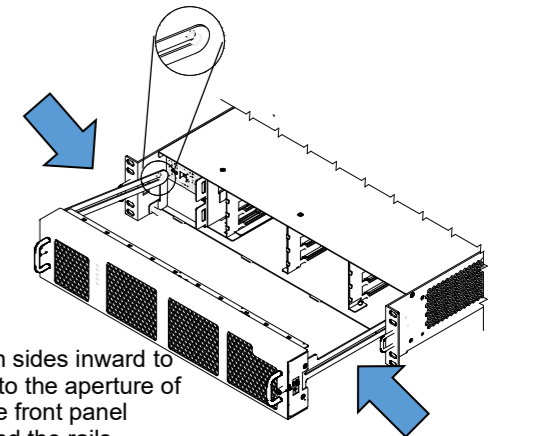


- 2 Push the front panel straight into the frame body.

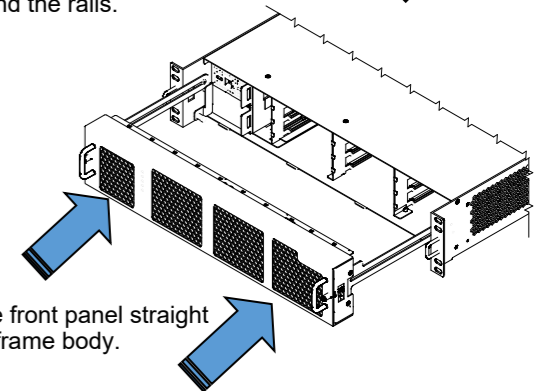

4. Front Interior

The slot configuration as shown below is revealed when the front panel is removed.

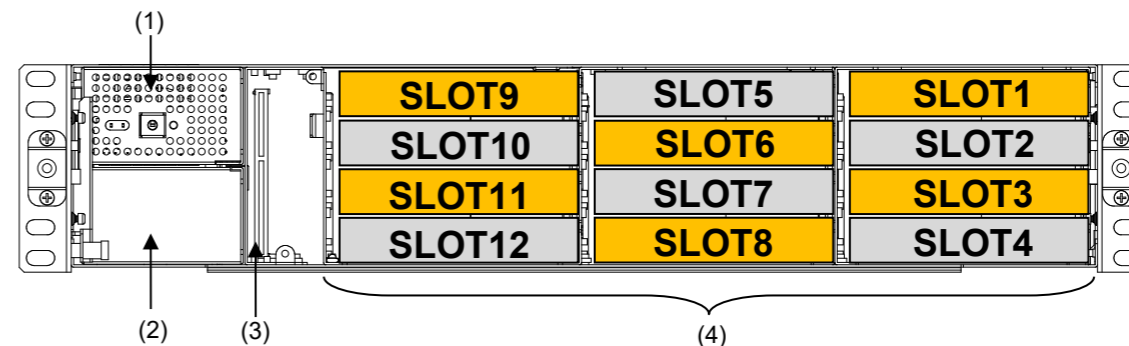

No.	Slot Type	Description
(1)	Power Supply 1 Slot	Dedicated power unit installed in this slot as standard. Power is supplied when the power supply switch is turned on.
(2)	Power Supply 2 Slot	Slot for redundant power supply USF-212PS. Redundant operation available when optional USF-212PS is installed. A blank panel will otherwise cover the slot.
(3)	Control Card Slot	Slot for network control card. Enables SNMP monitoring through LAN ports on the rear panel and alarm output from the ALARM connector and allows control over the all slot modules..
(4)	USF Module Slots	Dedicated USF module slots. (Front USF modules) For details on module operation, refer to the respective operation manuals.

You can download manuals and other documents by registering your email address.




<https://www.for-a.com/>



5. USF Module Installation

Module installable slots vary depending on the USF module type. (See "Installation Slots for Front and Rear Modules" below.)
If multiple free slots exist, do not install modules side-by-side but leave slots open to prevent overheating.
The procedure for installing the USF module in Slot 1 is described below as an example.


Installing USF Rear Module

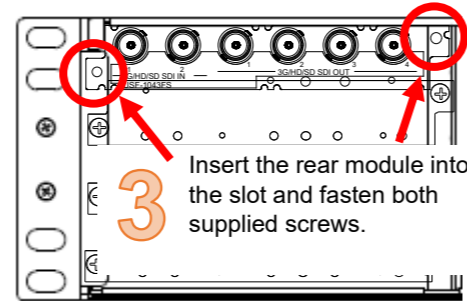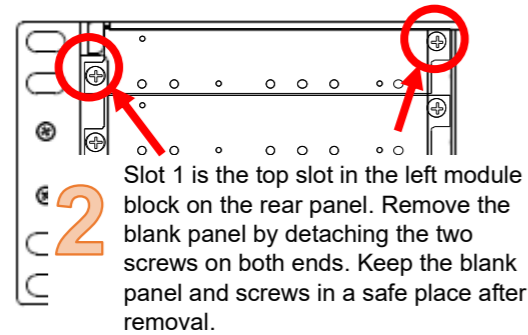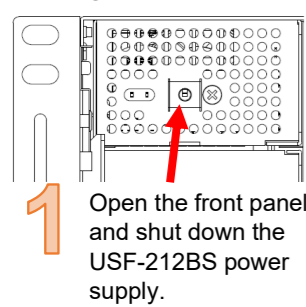

Installing a USF Front Module

* Always install the rear module first, then the front module.

- (1) Slot 1 is the top slot in the right block of the front panel. (Refer to 4. "Front Interior")
- (2) Set the front module on the guide rail and carefully insert the front module slowly.

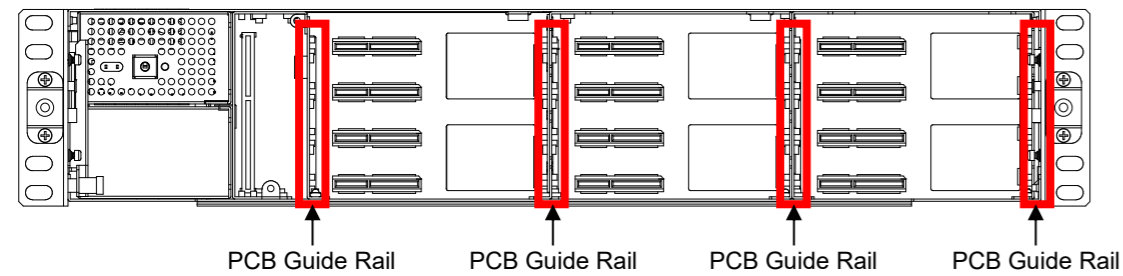

- (3) Push the handle until the front module clicks into the connectors.

Always use handles when inserting modules. Otherwise, the modules may be damaged.

Installation Slots for Front and Rear Modules

* Refer to Module Operation Manuals for USF-10IP series.

<TYPE1>


Front: 1 slot (All slots)
Rear: 1 slot (All slots)

Installable modules

105DADA	402AADC
108ADA	1013MUX
1040VEA	1013DEMUX
1053DDA	1043FS
105DDA-12G	105FS-12G
105DDA-12GA	1043VM
204ADAC	80SDICS

<TYPE2>

Front: 1 Slot (Even slots only)
Rear: 2 Slots (Upper and Lower)

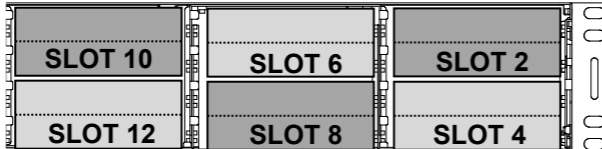


Installable modules:

1100VEA	1043SS
1044UDC	1043VTG-LI

<TYPE3>

Front: 1 slot (Odd slots only)
Rear: 2 slots (Upper and lower)

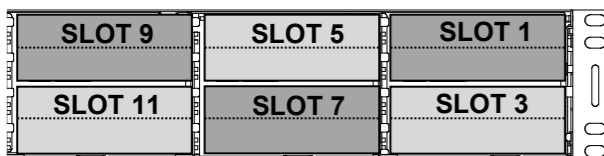

Installable modules:

106UDC-12G	101MDX4-12G
106DC-12G	101MDX8-12G
106TICO-12G	111DDA-12G

Modules that can be remotely controlled from a PC require installation of both Processor Control GUI Launcher and GUI Control Software.

Available modules:

106UDC-12G	106DC-12G
101MDX4-12G	101MDX8-12G
105FS-12G	106TICO-12G

See the Processor Control GUI Launcher Operation Manual for details

- USF modules come as front and rear sets. Be sure to install set modules (front and rear) into their proper slots.
- Install blank panels over free slots to prevent foreign material from entering and overheating the chassis.



- Beware of the occurrence of electrical breakdown in USF Modules.
- Wear an antistatic wrist strap or equivalent to equalize the electrical potential of the USF-212BS unit and the worker's body. Do not touch the PCB wiring or parts legs directly with your fingers while working.
- Each USF Module can be installed and uninstalled while the power is on in case of emergency. Shut down the power for non-emergency work.
- When front module is being installed / uninstalled while the power is on, the front panel is in open state. The fan will stop during the procedure, so it is essential to complete the installation within a short period and to close the front panel immediately.
- Be sure to shut down the power to install and uninstall a control module.

6. Connecting USF-212BS from a PC


USF-212BS can be monitored by the Web GUI or an SNMP Manager and generate alarms to indicate errors or warnings over LAN. The module provides two LAN connection ports: LAN1/2 or LAN A. Select one of them according to the system.

There are two ways to connect to USF-212BS from a PC: Using LAN1/2 port or LAN A port. Connect to fit your system.

Connecting via LAN A




LAN A LED
Lit Green: Connected
Flashing Orange: Transmitting and receiving data

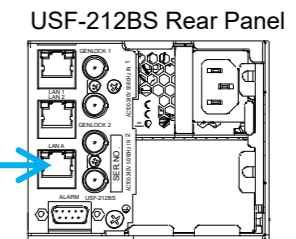


LAN A IP Address
Factory default
172.16.0.10

Connecting via LAN1 or LAN2

Connect to LAN1 or LAN2 on the rear panel. (Example below: LAN1)

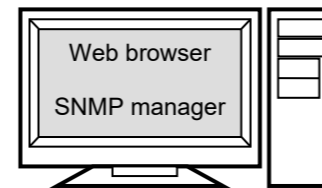

LAN1 LED (LAN2 LED)
Lit Green: Connected
Flashing Orange: Transmitting and receiving data

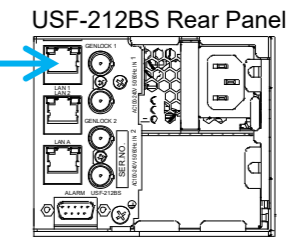

LAN 1/2 IP Address
Factory default
192.168.0.10

Slot1 to 12 IP Address
Factory default
192.168.0.11
to 192.168.0.22

7. Network Default Setting


Open the web browser of the PC and input address. A status page as shown opens on the web browser when connection is established.

Connecting to LAN A: <http://172.16.0.10/> (Factory Setting)

LAN1 または LAN2 と接続しているとき : <http://192.168.0.10/> (Factory Setting)

IP Address Change

- (1) Click the **Network** tab.
- (2) Input new IP address into the IP Address box of **WAN (LAN A) Settings** to change LAN A IP address.
Input new IP address into the IP Address box of **LAN (LAN1/2) Settings** to change LAN 1/2 IP address.
- (3) A confirmation message window opens when you click **Apply**.
Click **OK** in the confirmation window.
- (4) Click **Utility** tab, then click **Restart**.
Click **OK** when the restart confirmation window opens.
USF-212BS restarts. The new setting is reflected after the restart.

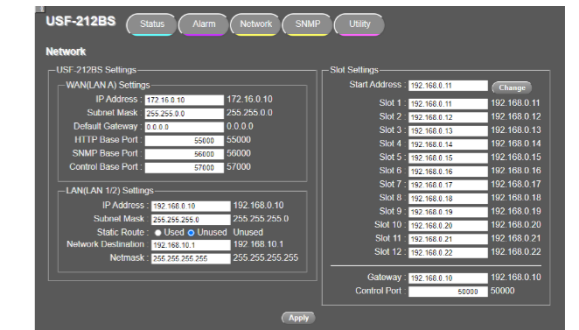

NOTE) IP addresses are assigned to respective USF-212BS modules installed.
Refer to USF-212BS operation manual Sec. "USF-212BS WEB GUI" for details on setting IP addresses.